

BIOMARINE INC., A WHOLLY OWNED SUBSIDIARY OF NEUTRONICS INC.

456 Creamery Way, Exton, Pennsylvania 19341 USA

p: (610) 524-8800 f: (610) 524-8807 w: www.BioPak240R.com

BioPak 240R Product Notice


Breathing Hose Tube Stubs

December 2015

ISSUE: The BioPak 240R center section lid contains a tube stub for the attachment of the breathing hose. Under some circumstances, if the edge of this tube stub is not smooth as shown on the left side of the photograph below it could lead to breathing hose damage in the form of tearing or cutting.

CORRECTIVE ACTION:

1. Inspect the outside edge of the tube stub located on the center section lid. Inspection should determine if the outside edges of any of the tube stubs are sharp.
2. If the edges of the tube stubs are found to be **sharp** use 100 grit sandpaper to round over the tube stub edge followed by 400 grit sandpaper to ensure a clean and smooth surface as shown below. **DO NOT OVER SAND.**

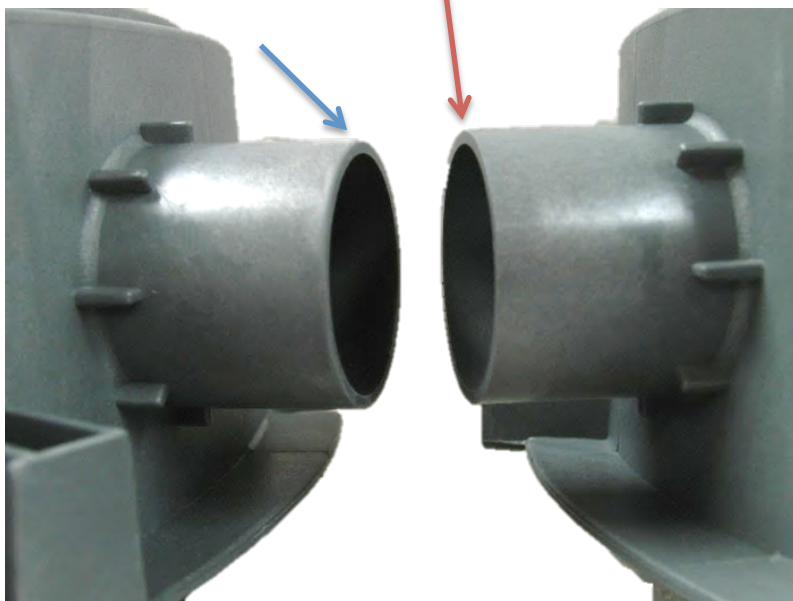

Rounded Over Edge (left), Sharp Edge (right)

CONTACT INFORMATION:

If you have questions concerning this notice, contact Biomarine at (610) 484-1616. You may also contact our service department at jack.derfler@neutronicsinc.com.